


MODEL **L5T-A**

This Parts List is for the exclusive parts for the L5T-A

Please refer to L5T Parts List for the parts not listed in this publication.

Fig. 1 FRAME & FRONT FORK

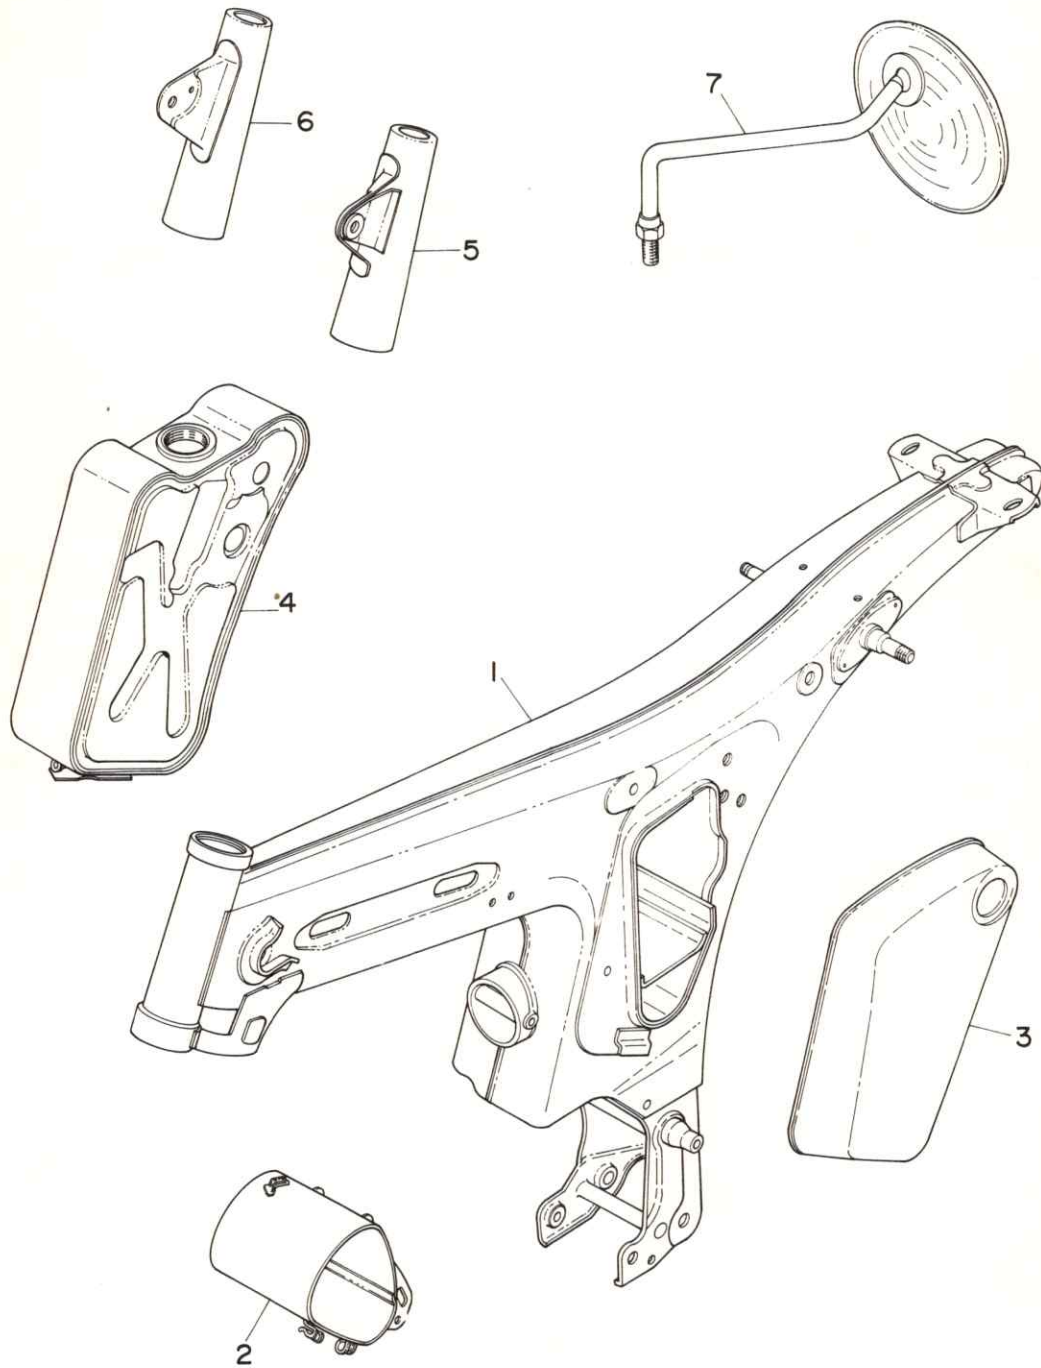


FWD

FRAME & FRONT FORK

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
1- 1	234-21110-00-63	FRAME COMP.		1		Brilliant Red
1- 2	225-14411-00-63	CASE, air cleaner		1		Brilliant Red
1- 3	220-21711-00-63	COVER, side (L.H)		1		Brilliant Red
1- 4	220-21705-01-63	OIL TANK ASS'Y	(ISO)	1		Brilliant Red
1- 0-1	234-23100-60-63	FRONT FORK ASS'Y		1		Brilliant Red
1- 5	206-23121-60-63	. COVER, upper (L.H)		1		Brilliant Red
1- 6	206-23131-60-63	. COVER, upper (R.H)		1		Brilliant Red
1- 7	227-26290-10	BACK MIRROR ASS'Y (L. H)		1		




Fig. 2 FUEL TANK

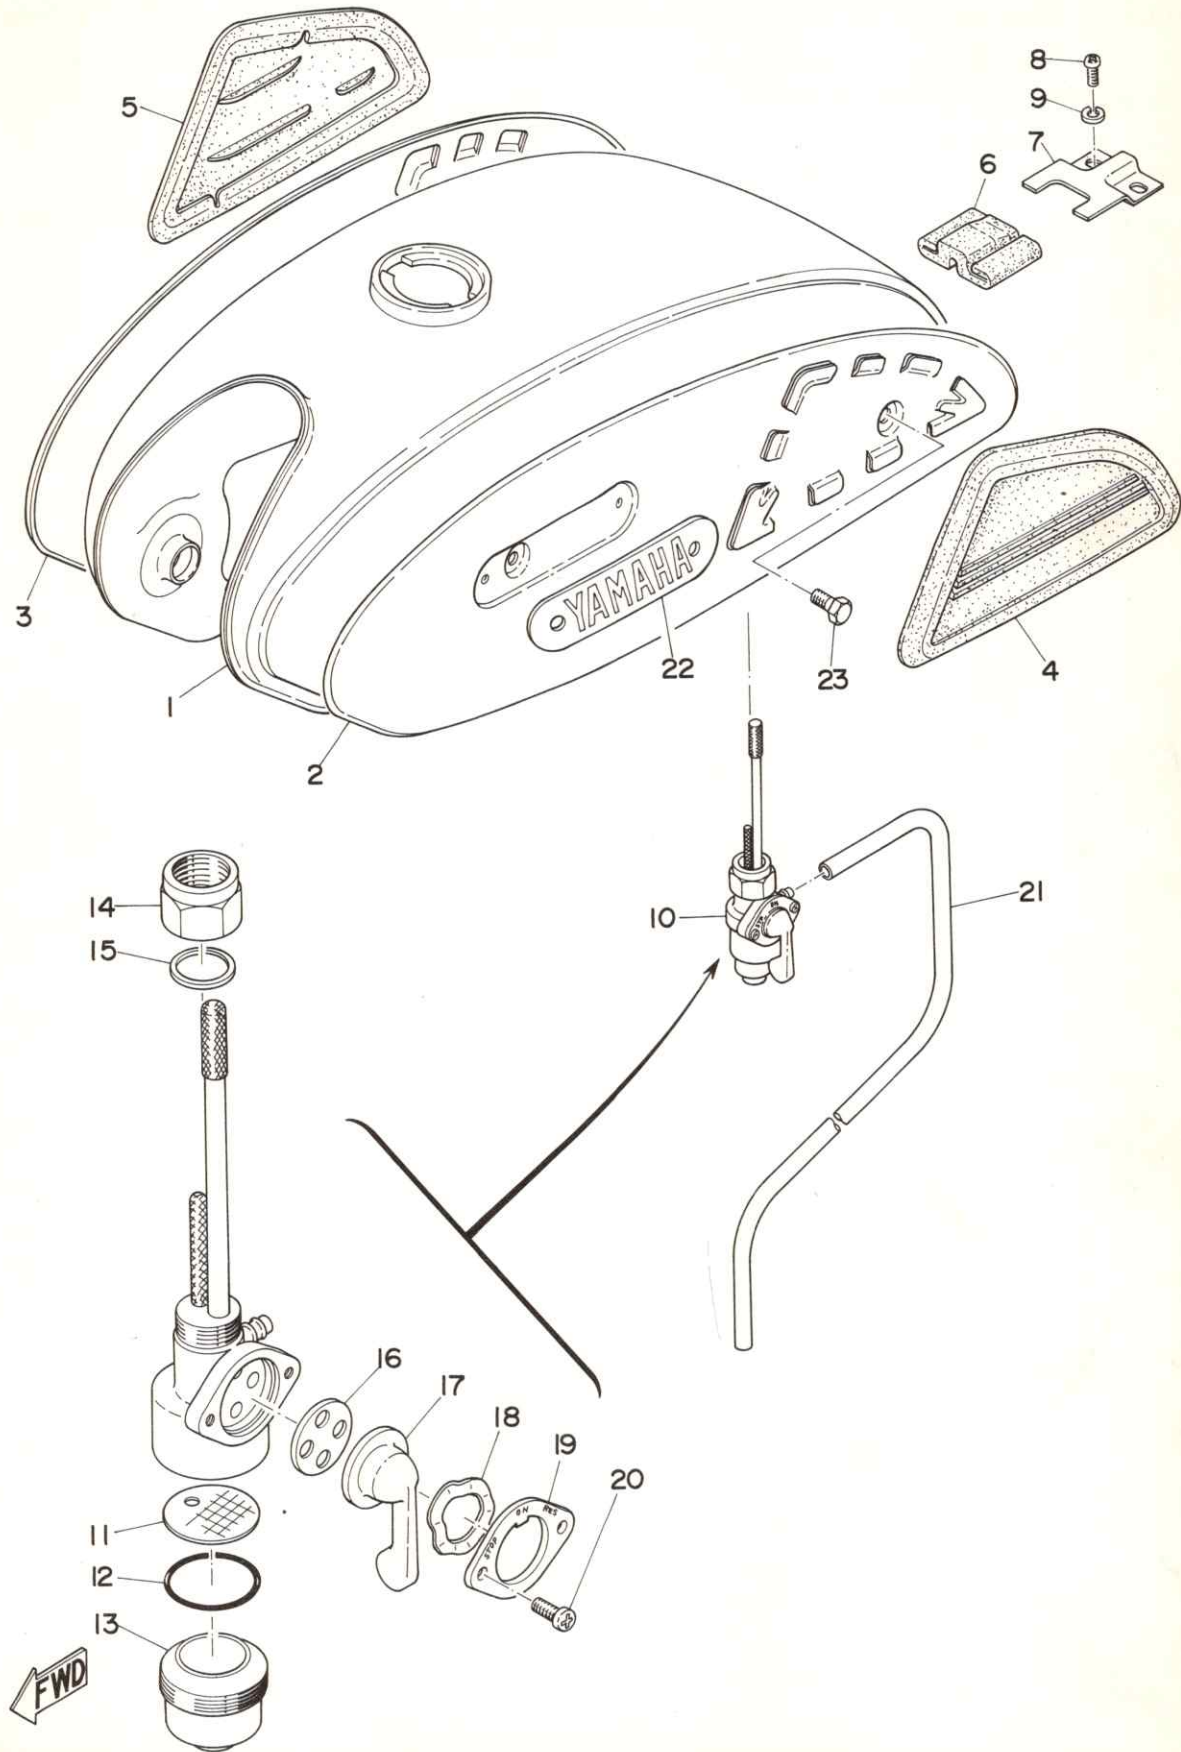

FUEL TANK

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
2- 1	254-24110-00-63	FUEL TANK COMP.		1		Brilliant Red
2- 2	254-24129-00	COVER, side (L.H)	(ISO)	1		
2- 3	254-24139-00	COVER, side (R.H)	(ISO)	1		
2- 4	254-24171-00	GRIP, knee (L.H)		1		
2- 5	254-24172-00	GRIP, knee (R.H)		1		
2- 6	164-24183-00	DAMPER, locating (3)		1		
2- 7	164-24115-00	STAY, fuel tank		1		
2- 8	92501-06012	SCREW, pan head		2		
2- 9	92901-06100	WASHER, spring		2		
2-10	132-24500-02	FUEL COCK ASS'Y	(ISO)	1		
2-11	132-24515-00	. NET, filter		1		
2-12	132-24522-00	. GASKET, filter		1		
2-13	132-24521-00	. CUP, filter		1		
2-14	132-24531-00	. NUT		1		
2-15	132-24532-00	. GASKET, nut		1		
2-16	137-24523-00	. VALVE		1		
2-17	168-24524-00	. LVER, cock		1		
2-18	132-24518-00	. WASHER, wave		1		
2-19	132-24525-00	. PLATE, lever fitting		1		
2-20	98501-03006	. SCREW, pan head	(ISO)	2		
2-21	156-21766-00	PIPE		1		
2-22	132-24161-00	EMBLEM, fuel tank		2		
2-23	168-24178-00	BOLT, cover fitting		4		
2-24	254-24710-00	Single SEAT		1		
2-25	254-24711-00	SEAT Cover		1		

Fig. 3 HEAD LAMP

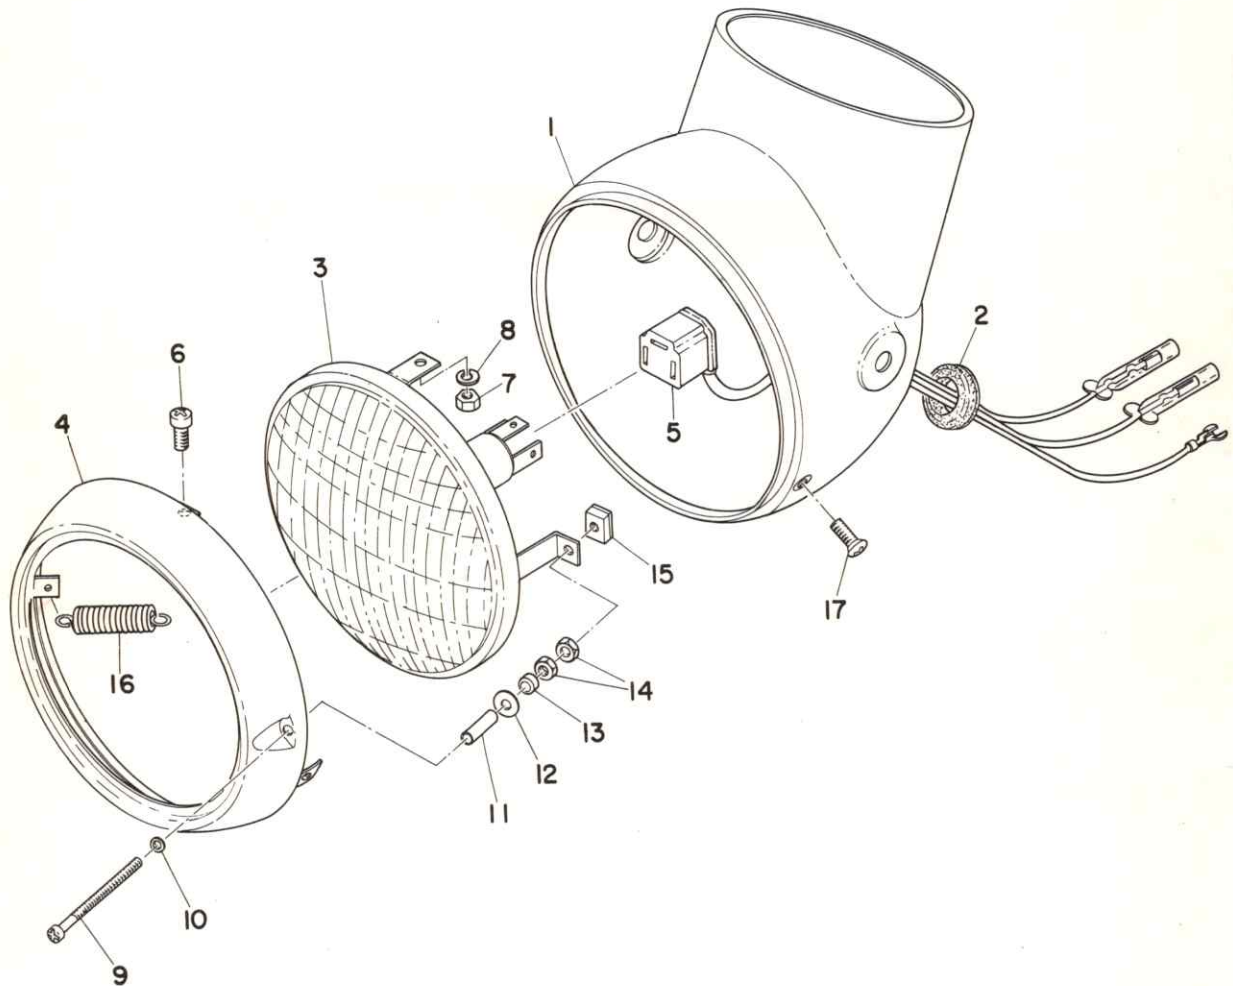

FWD

HEAD LAMP

Ref No.	Parts No.	Parts Name	Description	Q'ty	S·R	Remarks
3- 1	201-84330-00-63	BODY ASS'Y		1		Brilliant Red
3- 2	122-84153-00	. GROMMET		2		
3- 0-1	234-84310-60	HEAD LAMP UNIT ASS'Y	(ISO)	1		
3- 3	234-84320-60	. LENS ASS'Y		1		
3- 4	234-84315-60	. RIM, head lamp	(ISO)	1		
3- 5	234-84312-60	. SOCKET		1		
3- 6	98501-04010	. SCREW, pan head	(ISO)	2		
3- 7	802-84126-00	. NUT		2		
3- 8	92901-04100	. WASHER, spring		2		
3- 9	198-84331-60	. SCREW, rim adjuster	(ISO)	1		
3-10	233-84127-60	. WASHER, special		1		
3-11	233-84133-60	. COLLAR, adjust screw		1		
3-12	92901-04200	. WASHER, plain		1		
3-13	132-84328-60	. SPACER		1		
3-14	802-84126-00	. NUT	(ISO)	2		
3-15	198-84334-60	. NUT, adjust	(ISO)	1		
3-16	132-84335-60	. SPRING, lens adjust		1		
3-17	195-84325-00	SCREW, rim fitting	(ISO)	1		

First edition, Aug., '69

YAMAHA L5T-A
PARTS LIST

YAMAHA MOTOR CO., LTD.
HAMAKITA JAPAN

YAMAHA

L5T



